



Optional Gunwale for OD's

The OD16 and 18 are designed without gunwales, this keeps the construction very simple and economical. Many of our builders have installed gunwales, here how:


Gunwales

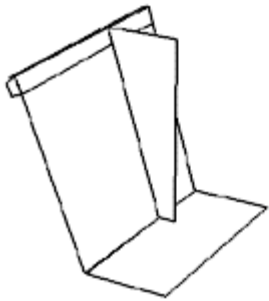


Start with frame and rubrail installed . . .

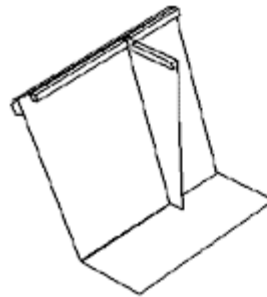


Install cleat on upper frame edge, sheer clamp is not always specified, see construction plans.

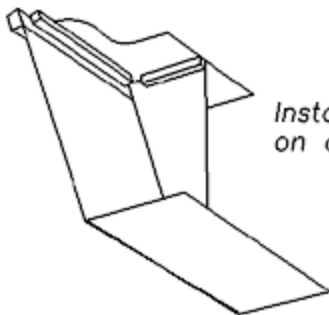

Install side deck (coaming) on cleats and rubrail.

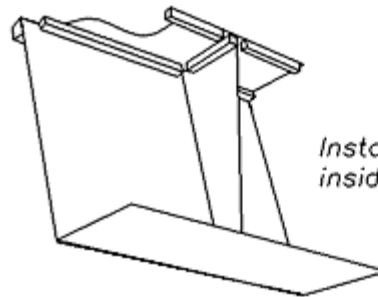

Install cleat along decks inside edge.

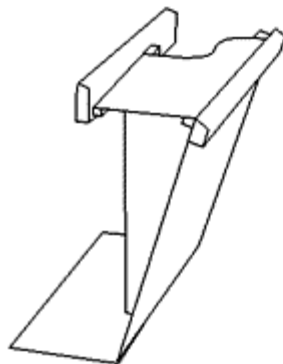

Install coaming on inside cleat and finish with fillet between deck and inwale.

If you did not find the answer to your question, please use our [message board](#) and we will respond within a few hours.

Or explore the HowTo files at our technical support web site bateau2.com